


Important Recall Repair Kit Instructions


4358-3782



1 Unthread harness from harness adjustment bracket.

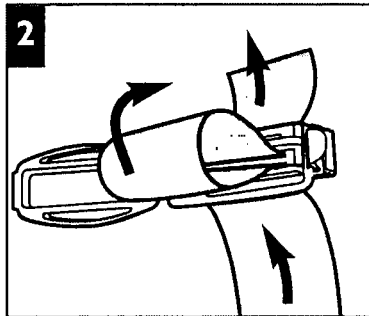


2 Lace loose end of harness onto one harness clip as shown.

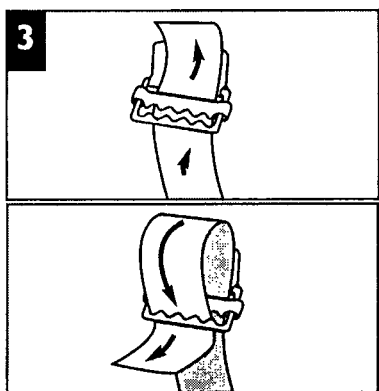

3 Rethread one harness end onto one adjustment bracket by threading loose end behind locking teeth and up between upper teeth and top of bracket. Thread harness end between locking teeth and out the bottom of bracket as shown. Make sure harness does not twist.

Repeat first three steps for other harness strap.

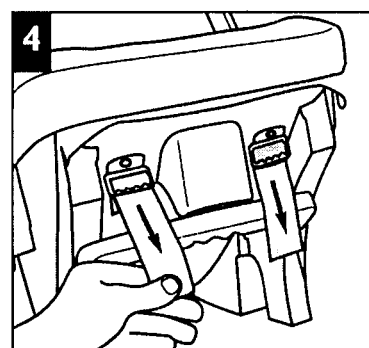


Review instruction manual to secure your child.

With child in seat, pull on each harness strap end evenly to tighten harness snugly.

NOTE: A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.




5 Slide harness clip close to the harness adjustment bracket. Lay loose end of harness in bottom of harness clip.

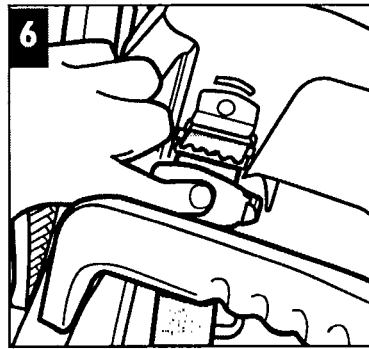

6 Push down on harness clip lid to lock. You will hear a "click" when it is locked.

Repeat for other side.

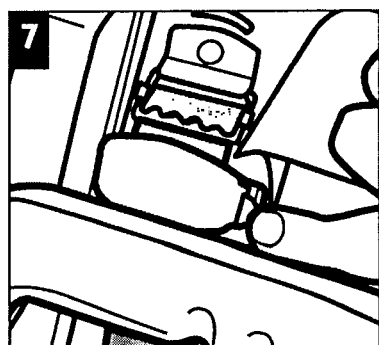

7 To unlock harness clip, press on locking tab.

NOTE: Snug harness and attach harness clips each time the seat is used.

Questions? Problems? Call Dorel Juvenile Group, Inc. Consumer Relations at 1-800-544-1108 from 7 a.m. to 6:00 p.m. EST Monday through Thursday and from 7 a.m. to 4:30 p.m. EST Friday.

Review the original instructions for proper child restraint usage, warnings and additional usage information.

Keep these and the original instructions with your child restraint for future reference. If you are missing the original instructions, call Dorel Juvenile Group Consumer Relations.